



Original	Substituto	Original	Substituto
Standby	Power	CH+	CH+ / Page+
Mute	Mute / Dimmer	Vol-	Vol-
1	1	Display	Display / Media
2	2	CH-	CH- / Page-
3	3	Up	Up
4	4	Left	Left
5	5	OK/Enter	OK
6	6	Right	Right
7	7	Menu	Menu / Home
8	8	Down	Down
9	9	Exit	Exit / Cancel / Clear
0	0	Source	AV / Input / RDS
-/-	Shift + Guide / EPG / -/-	P.Mode	Picture / Format
Recall	Back / Return	S.Mode	Sound / Title
Vol+	Vol+	Sleep	Sleep / Timer
I/II/Audio	Audio / Lang I/II	Play/Pause / Size	Zoom / Size
Auto	Smart / List	Play/Pause / Size	Play / Slow





Original	Substituto
Play/Pause / Size	Pause / Step / Freeze
Stop/Hold	Stop / Hold
Text	Text / Goto
Subtitle	Subtitle / EQ
<</Index	<< / Tune-
>>/Reveal	>> / Tune+
I<</Subpage	I<< / Preset-
>>I/FAV	>>I / Preset+
>>I/FAV	Fav / Marker / PC
Media	Shift + Display / Media
Rec	Rec / Rec Mode
EPG	Guide / EPG / -/--
Tv/Radio	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random

Original	Substituto

