



Original	Substituto	Original	Substituto
 Power	 Power	 Green	 Green
 1	 1	 Yellow/FAV+	 Yellow
 2	 2	 Blue	 Blue
 3	 3	 White/FAV-	 Media
 4	 4	 Pause	 Pause
 5	 5	 Mute	 Mute
 6	 6	 Menu	 Menu
 7	 7	 Exit	 Exit
 8	 8	 CH+	 Ch +
 9	 9	 CH-	 Ch -
 0/Multipict	 0	 Up	 Up
 Info	 Info	 Down	 Down
 UHF	 AV	 Right/↓	 Right
 Audio L/R	 Dual	 Left/↑	 Left
 Text	 Text	 OK	 Ok
 Sat/Tv	 Subt	 Vol+	 Vol +
 Red	 Red	 Vol-	 Vol -

Original	Substituto	Original	Substituto
 Green	 Green	 TV	 AUX
 Yellow/FAV+	 Yellow	 DVD	 REC MODE
 Blue	 Blue	 PLAY MODE	 STOP
 White/FAV-	 Media	 DISC NAV	 SOUND
 Pause	 Pause	 AD	 SETTINGS
 Mute	 Mute	 LIST	 DUAL
 Menu	 Menu	 SUBT	 OPT
 Exit	 Exit	 PROG	 SEARCH
 CH+	 Ch +	 PICTURE	 ECO
 CH-	 Ch -	 SLEEP	 TV/R
 Up	 Up	 FORMAT	 3D
 Down	 Down	 E-MANUAL	 REPEAT
 Right/↓	 Right	 ZOOM	 TIMER
 Left/↑	 Left	 D.MENU	 TEXT
 OK	 Ok	 TOP MENU	 DISPLAY
 Vol+	 Vol +	 MENU	 INFO
 Vol-	 Vol -	 CLEAR	 EXIT
		 CH+	 BACK
		 CH-	 HOME
			 SMART
			 APP
			 MEDIA
			 CH+
			 CH-
			 1
			 2
			 3
			 4
			 5
			 6
			 7
			 8
			 9
			 GUIDE
			 0
			 PRE-CH
			 A
			 B
			 C
			 D
			 Mandis SHOP
			 www.mandis.tv



