



Original	Substituto	Original	Substituto
	Power		Power
	Source		AV / Input / RDS
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Lang		Audio / Lang I/II
	<<		<< / Tune-
	>>		>> / Tune+
	[≡]..		Sound / Title
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	1		1
	2		2
	3		3

Original	Substituto	Original	Substituto
	4		4
	5		5
	6		6
	7		7
	8		8
	TV		TV/Radio /
	9		9
	0		0
	Recall		Fav / Marker / PC
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Back		Back / Return
	Exit		Exit / Cancel / Clear





Original	Substituto
 Q.Menu	 D.Menu / Top
 Internet	 Smart / List
 Music/Photo/Video	 Display / Media
 */o	 Shift + Green / APP /
 */Q	 Shift + Red / Netflix /
 Tv Guide	 Guide / EPG / -/-
 Vol+	 Vol+
 P+	 CH+ / Page+
 i	 Info / Angle
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 Vol-	 Vol-
 P-	 CH- / Page-
 Size	 Zoom / Size

Original	Substituto

