







 

 





 

 



 



 









 

 





Original	Substituto
	 Power
	 D.Menu / Top
	 Mute / Dimmer
	 TV/Radio /
	 Vol+
	 Text / Goto
	 I<< / Preset-
	 OK
	 >>I / Preset+
	 Sleep / Timer
	 Vol-
	 Sound / Title
	 1
	 2
	 3
	 4
	 5

Original	Substituto
	 6
	 7
	 8
	 9

