



Original	Substituto	Original	Substituto
Power	Power	Down/CH-	Down
Mute	Mute	Right	Right
1	1	Left	Left
2	2	OK	Ok
3	3	Vol+	Vol +
4	4	Vol-	Vol -
5	5	Menu	Menu
6	6	Exit	Exit
7	7	Red	Red
8	8	Green	Green
9	9	Yellow	Yellow
0	0	Blue	Blue
PgUp	Ch +	EPG	Guide
PgDn	Ch -	Audio	Dual
FAV+	>>I	SUB	Subt
FAV-	I<<	Zoom	Eject
Up/CH+	Up	FAV	Pre Ch



