



 
 

 

 

 

 

 

 

 

 

 





 

 





Original	Substituto
 Eject	 Eject / Surround
 Power	 Power
 DV/USB	 Shift + 8
 HDD	 Shift + 7
 DVD	 Shift + 2
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Add/Clear	 Exit / Cancel / Clear

Original	Substituto
 Goto	 Text / Goto
 Setup	 Setup / OPT /
 Up	 Up
 Navigation	 Smart / List
 Left / Replay	 Left
 Select	 OK
 Right / Skip	 Right
 Timer	 Sleep / Timer
 Down	 Down
 Return / P-P	 Back / Return
 Timeshift	 Picture / Format
 Rec / OTR	 Rec / Rec Mode
 Rec To	 Shift + Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause / Step	 Pause / Step / Freeze
 Slow / Sort	 Shift + Play / Slow





Original	Substituto
	 << / Tune-
	 << / Preset-
	 Vol+
	 CH+ / Page+
	 >> / Tune+
	 >> / Preset+
	 Vol-
	 CH- / Page-
	 Audio / Lang I/II
	 Menu / Home
	 Green / APP / Repeat
	 Info / Angle
	 Subtitle / EQ
	 Zoom / Size
	 Mute / Dimmer
	 Display / Media

Original	Substituto

