







 

 
 
Original	Substituto	Original	Substituto
Power	Power	CHN List	Smart / List
Mute	Mute / Dimmer	0	0
Picture	Picture / Format	Return / Back	Back / Return
Sound	Sound / Title	Menu	Menu / Home
Zoom	Zoom / Size	Up	Up
Subtitle	Subtitle / EQ	Source	AV / Input / RDS
EPG	Guide / EPG / -/--	Left	Left
FAV	Fav / Marker / PC	Enter	OK
1	1	Right	Right
2	2	Down	Down
3	3	Exit	Exit / Cancel / Clear
4	4	TV / Radio	TV/Radio /
5	5	Vol +	Vol+
6	6	Home	D.Menu / Top
7	7	PR +	CH+ / Page+
8	8	Vol -	Vol-
9	9	PR -	CH- / Page-





Original	Substituto
 Rec	 Rec / Rec Mode
 Sleep	 Sleep / Timer
 Info	 Info / Angle
 Play/Pause / Index	 Play / Slow
 Play/Pause / Index	 Pause / Step / Freeze
 << / Reveal	 << / Tune-
 >> / Mix	 >> / Tune+
 Stop / Cancel	 Stop / Hold
 I<< / Size	 I<< / Preset-
 >>I / Sub-Page	 >>I / Preset+
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 I/II / Nicam	 Audio / Lang I/II
 Text	 Text / Goto
Freeze / Hold	Shift + Stop / Hold

Hold

Original	Substituto
 PVR List	 Display / Media
 Quick	 Setup / OPT /
 AD	 Eject / Surround
 3D	 Shift + 3

