



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-		Guide
	Recall		Back
	Source		AV
	Display		Info
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Menu		Menu
	Exit		Exit
	Vol+		Vol +
	Vol-		Vol -
	P.Mode		Format
	S.Mode		Dual
	CH+		Ch +
	CH-		Ch -
	Input		Shift + AV
	Fav / Angle		Pre Ch
	Zoom		Eject
	Sleep		Sleep
	Red		Red





Original	Substituto	Original	Substituto
 Green / 3D	 Green		
 Green / 3D	 3D		
 Yellow	 Yellow		
 Blue	 Blue		
 Play / Pause	 Play		
 Play / Pause	 Pause		
 FR	 <<<		
 FF	 >>>		
 Stop	 Stop		
 Prev	 I<<<		
 Next	 >>>I		
 Media	 Media		
 Keyboard	 Text		
 PC	 D. Menu		
 Refresh	 List		
 Search	 TV/R		
 Home	 Smart		

