

















 



 



 











| Original | Substituto | Original | Substituto |
|---|------------|---|-------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | Sleep |  | Sleep / Timer |
|  | 0 |  | 0 |
|  | Recall |  | Back / Return |
|  | Vol+ |  | Vol+ |
|  | I/II |  | Audio / Lang I/II |
|  | PR+ |  | CH+ / Page+ |

| Original | Substituto | Original | Substituto |
|---|------------|---|-----------------------|
|  | Vol- |  | Vol- |
|  | Input |  | AV / Input / RDS |
|  | PR- |  | CH- / Page- |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Menu |  | Menu / Home |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Favourite |  | Fav / Marker / PC |
|  | FAV- |  | Shift + CH- / |
|  | FAV+ |  | Shift + CH+ / |
|  | Info |  | Info / Angle |
|  | P-Mode |  | Picture / Format |
|  | S-Mode |  | Sound / Title |
|  | ARC |  | Display / Media |






























 










| Original | Substituto |
|----------|-----------------------------|
| EPG | Guide / EPG / -/-- |
| Text | Text / Goto |
| Mix | Shift + Text / |
| Size | Zoom / Size |
| Reveal | D.Menu / Top |
| Hold | Stop / Hold |
| Index | Smart / List |
| S.Page | Eject / Surround |
| S.TITL | Subtitle / EQ |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| | |
| | |
| | |
| | |
| | |

| Original | Substituto |
|----------|------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |















 






| Original | Substituto | |
|---------------|---|---------------------------|
| Update |  +  | Shift + D.Menu / Top Menu |
| Aft/Caf |  +  | Shift + AV / Input / RDS |
| Reveal |  | Setup / OPT / |
| Off/Tim |  | Eject / Surround |
| Game Coo |  | Smart / List |
| 2.Fav P/C 2. |  | Fav / Marker / PC |
| Chan.Down |  | CH- / Page- |
| 1 |  | 1 |
| 2 |  | 2 |
| 3 |  | 3 |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| Guide -/-- 1. |  | Guide / EPG / -/-- |

| Original | Substituto | |
|--------------|---|-----------------------------|
| 0/10 |  | 0 |
| Menu audio |  | Audio / Lang I/II |
| Red |  | Red / Netflix / Search |
| Green |  | Green / APP / Repeat |
| Yellow |  | Yellow / YouTube / Repeat |
| Blue |  | Blue / Prime Video / Random |
| Color+ P.Std |  | Picture / Format |
| Color- S.Std |  | Sound / Title |
| Audio+ |  +  | Shift + Vol+ |
| Tune- |  | << / Tune- |
| Tune+ |  | >> / Tune+ |
| Menu |  | Menu / Home |
| Mute |  | Mute / Dimmer |
| Info |  | Info / Angle |
| Subt.List |  | Subtitle / EQ |
| Txt Stop |  | Stop / Hold |
| Sleep Timer |  | Sleep / Timer |





| Original | Substituto | Original | Substituto |
|------------|---|----------|------------|
| Return TV |  TV/RADIO / | | |
| Menu video |  D.Menu / Top | | |
| Text |  Text / Goto | | |
| Txt Expand |  Zoom / Size | | |
| TV/AV |  AV / Input / RDS | | |
| On/Off |  Power | | |
| Menu Up |  Up | | |
| Display |  Display / Media | | |
| Menu Left |  Left | | |
| OK Enter |  OK | | |
| Menu Right |  Right | | |
| Menu Off |  Exit / Cancel / Clear | | |
| Menu Down |  Down | | |
| Back |  Back / Return | | |
| Volume+ |  Vol+ | | |
| Chan.Up |  CH+ / Page+ | | |
| Volume- |  Vol- | | |

