
 

















| Original | Substituto |
|---|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  DTV/ATV |  D.Menu / Top |
|  Recall |  Back / Return |
|  P.Mode |  Picture / Format |
|  S.Mode |  Sound / Title |
|  Sleep |  Sleep / Timer |

| Original | Substituto |
|--|---|
|  Menu |  Menu / Home |
|  Source |  AV / Input / RDS |
|  Up |  Up |
|  Left |  Left |
|  Enter |  OK |
|  Right |  Right |
|  Down |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Display |  Display / Media |
|  Vol+ |  Vol+ |
|  Vol- |  Vol- |
|  MTS |  Info / Angle |
|  Rec List |  Smart / List |
|  CH+ |  CH+ / Page+ |
|  CH- |  CH- / Page- |
|  FAV/List |  Fav / Marker / PC |
|  Rec |  Rec / Rec Mode |





| Original | Substituto | Original | Substituto |
|--|--|--|---|
|  Freeze |  Pause / Step / Freeze |  Green |  Green / APP / Repeat |
|  Guide |  Guide / EPG / -/- |  Yellow |  Yellow / YouTube / Repeat |
|  << |  << / Tune- |  Cyan |  Blue / Prime Video / Random |
|  >> / Aspect |  >> / Tune+ | | |
|  >> / Aspect |  Shift + Picture / Format | | |
|  << / Cancel |  << / Preset- | | |
|  << / Cancel |  Shift + Exit / Clear / Clear | | |
|  >> / Sub.PG |  >> / Preset+ | | |
|  Stop / Index |  Stop / Hold | | |
|  Play/Pause / Timeshift |  Play / Slow | | |
|  Tv/Radio |  TV/Radio / | | |
|  Subtitle |  Subtitle / EQ | | |
|  Reveal |  Eject / Surround | | |
|  Size |  Zoom / Size | | |
|  Hold |  Shift + Stop / | | |
|  Text |  Text / Goto | | |
|  Red |  Red / Netflix / Search | | |


| Original | Substituto | Original | Substituto |
|--|---|----------|------------|
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Cyan |  Blue / Prime Video / Random | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |





| Original | Substituto | Original | Substituto |
|---|------------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | DTV/ATV |  | D.Menu / Top |
|  | Recall |  | Back / Return |
|  | P.Mode |  | Picture / Format |
|  | S.Mode |  | Sound / Title |
|  | Sleep |  | Sleep / Timer |
|  | Menu |  | Menu / Home |
|  | Source |  | AV / Input / RDS |
|  | Up |  | Up |
|  | Left |  | Left |
|  | Enter |  | OK |
|  | Right |  | Right |
|  | Down |  | Down |
|  | Exit |  | Exit / Cancel / Clear |
|  | Display |  | Display / Media |
|  | Vol+ |  | Vol+ |
|  | Vol- |  | Vol- |
|  | MTS |  | Info / Angle |
|  | Rec List |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | CH- |  | CH- / Page- |
|  | FAV/List |  | Fav / Marker / PC |
|  | Rec |  | Rec / Rec Mode |



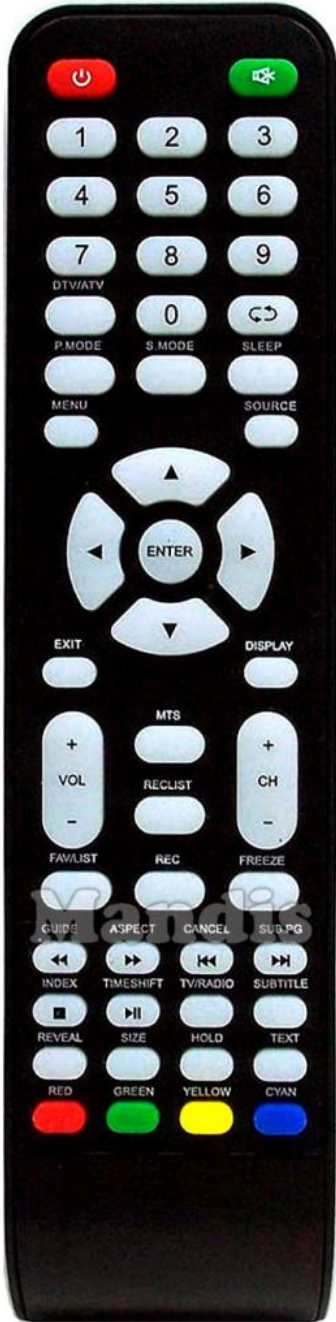

| Original | Substituto | Original | Substituto |
|--|---|--|---|
|  Freeze |  Pause / Step / Freeze |  Green |  Green / APP / Repeat |
|  Guide |  Guide / EPG / -/- |  Yellow |  Yellow / YouTube / Repeat |
|  << |  << / Tune- |  Cyan |  Blue / Prime Video / Random |
|  >> / Aspect |  >> / Tune+ | | |
|  >> / Aspect |  Shift + Picture / Format | | |
|  I<< / Cancel |  I<< / Preset- | | |
|  I<< / Cancel |  Shift + Exit / Cancel / Clear | | |
|  >>I / Sub.PG |  >>I / Preset+ | | |
|  Stop / Index |  Stop / Hold | | |
|  Play/Pause / Timeshift |  Play / Slow | | |
|  Tv/Radio |  TV/Radio / | | |
|  Subtitle |  Subtitle / EQ | | |
|  Reveal |  Eject / Surround | | |
|  Size |  Zoom / Size | | |
|  Hold |  Shift + Stop / | | |
|  Text |  Text / Goto | | |
|  Red |  Red / Netflix / Search | | |

