 
 
 



 


 



 








 

 







 

 


 
 





 




Original	Substituto
 Power	 Power
 TV	 TV/R
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Retoru	 Back
 Sortie	 Exit
 Menu	 Menu
 V+	 Vol +
 V-	 Vol -
 Zoom	 Eject
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 0	 0

Original	Substituto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 <<	 <<
 >	 Play
 >>	 >>
 Stop	 Stop
 Rec	 Rec

