



| Original | Substituto | Original | Substituto |
|--|---|---|---|
|  Power |  Power |  Vol- |  Vol- |
|  Netflix |  Shift + Red / Netflix / |  i |  Info / Angle |
|  1 |  1 |  PR- |  CH- / Page- |
|  2 |  2 |  Menu |  Menu / Home |
|  3 |  3 |  Up |  Up |
|  4 |  4 |  Q.Menu |  D.Menu / Top |
|  5 |  5 |  Left |  Left |
|  6 |  6 |  OK |  OK |
|  7 |  7 |  Right |  Right |
|  8 |  8 |  Back |  Back / Return |
|  9 |  9 |  Down |  Down |
|  TV |  TV/Radio / |  EXit |  Exit / Cancel / Clear |
|  0 |  0 |  World |  Smart / List |
|  Recall |  Fav / Marker / PC |  Camera/Music/Ph |  Display / Media |
|  Vol+ |  Vol+ |  Guide |  Guide / EPG / -/-- |
|  Mute |  Mute / Dimmer |  */o |  Picture / Format |
|  PR+ |  CH+ / Page+ |  Games |  AV / Input / RDS |

| Original | Substituto | Original | Substituto |
|---|---|---|---|
|  |  |  | |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  |  |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  |  | |
|  |  | | |
|  |  |  |  |
| | | | |





| Original | Substituto | Original | Substituto |
|--|---|----------|------------|
|  [=]/Text |  Text / Goto | | |
|  Red |  Red / Netflix / Search | | |
|  Green |  Green / APP / Repeat | | |
|  Yellow |  Yellow / YouTube / Repeat | | |
|  Blue |  Blue / Prime Video / Random | | |
|  Lang |  Audio / Lang I/II | | |
|  [=].. |  Subtitle / EQ | | |
|  [-O-] |  Zoom / Size | | |
|  << |  << / Tune- | | |
|  |  Pause / Step / Freeze | | |
|  >> |  >> / Tune+ | | |
|  Rec |  Rec / Rec Mode | | |
|  Play |  Play / Slow | | |
|  Stop |  Stop / Hold | | |
| | | | |
| | | | |
| | | | |
| | | | |

