




























 





 





 

 

 

 



 










Original	Substituto	Original	Substituto
PP	PP	 RETURN BACK	Back / Return
	Power		Power
1	1	 TV 1	1
2	2	 DVD 2	2
3	3	 CD - DB 3	3
4	4	 VIDEO 4	4
5	5	 TAPE 5	5
6	6	 TUNER 6	6
7	7	 AUX - HDD 7	7
8	8	 USB 8	8
9	9	 BLUETOOTH 9	9
P<P	P<P	 PC FAV MARKER	Fav / Marker / PC
0	0	 HDMI - SAT 0	0
--	--	 -- GUIDE EPG	Guide / EPG / --
	Menu [M]	 HOME MENU	Menu / Home
	Info [i]	 ANGLE INFO	Info / Angle
	I-II	 LANG I/II AUDIO	Audio / Lang I/II

Original	Substituto	Original	Substituto
	Mute	 DIMMER MUTE	Mute / Dimmer
	Left		Left
	Up		Up
	Right		Right
	OK		OK
	Down		Down
	V -	 VOL -	Vol-
	V +	 VOL +	Vol+
	P -	 CH PAGE -	CH- / Page-
	P +	 CH PAGE +	CH+ / Page+
	Red / Sound	 NETFLIX SEARCH	Red / Netflix / Search
	Red / Sound	 TITLE SOUND	Sound / Title
	Green / Picture	 APP REPEAT	Green / APP / Repeat
	Green / Picture	 FORMAT PICTURE	Picture / Format
	Yellow / Feature	 YouTube REPEAT A-B	Yellow / YouTube / Repeat
	Blue / Install	 Prime Video RANDOM	Blue / Prime Video / Random
	Text	 GOTO TEXT	Text / Goto





Original	Substituto
 [≡o]	 Sleep / Timer
 Hold	 Stop / Hold
 [≡X]	 Exit / Cancel / Clear
 Mix / PIP Swap	 Smart / List
 PIP / Size	 Zoom / Size
 PIP Down / [≡?]	 << / Preset-
 PIP Up / Index	 >> / Preset+
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS

Original	Substituto

