 



 























 































 

 





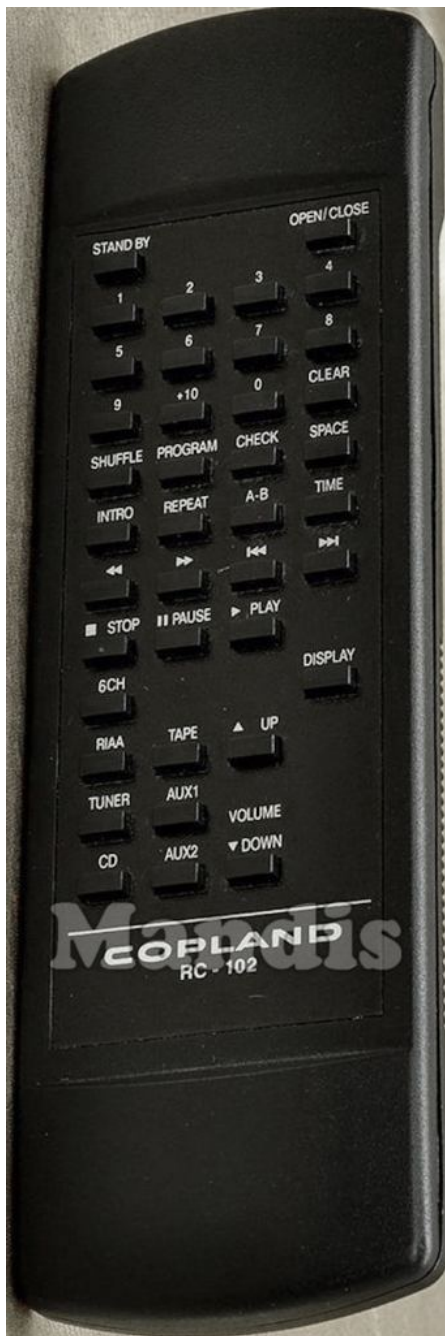



Original	Substituto	Original	Substituto
 Stand By	 Power	 VOLUME UP	 Vol+
 PLAY	 Play / Slow	 RIAA	 Smart / List
 PAUSE	 Pause / Step / Freeze	 SKIP NEXT	 CH+ / Page+
 STOP	 Stop / Hold	 VOLUME DOWN	 Vol-
 <<	 << / Tune-	 DISPLAY	 Display / Media
 >>	 >> / Tune+	 SKIP PREV.	 CH- / Page-
 I<<	 I<< / Preset-	 1	 1
 >>I	 >>I / Preset+	 2	 2
 OPEN / CLOSE	 Eject / Surround	 3	 3
 PROGRAM	 TV/Radio /	 4	 4
 CHECK	 Text / Goto	 5	 5
 VOLUME UP	 Up	 6	 6
 I<<	 Left	 7	 7
 INTRO	 OK	 8	 8
 >>I	 Right	 9	 9
 CLEAR	 Exit / Cancel / Clear	 +10	 Guide / EPG / -/--
 VOLUME DOWN	 Down	 0	 0









 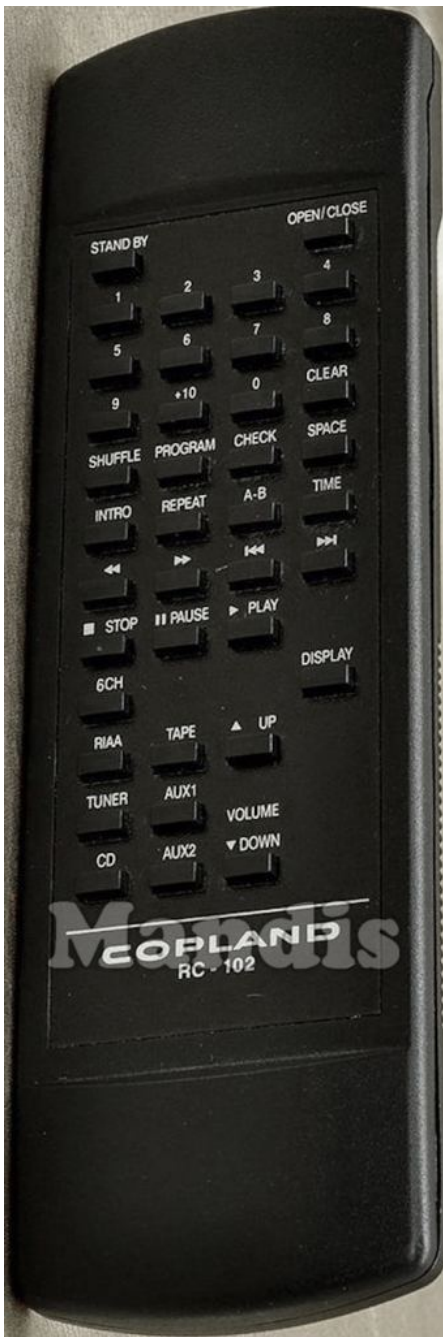





Original	Substituto	Original	Substituto
Stand By	 Power	VOLUME UP	 Vol+
PLAY	 Play / Slow	RIAA	 Smart / List
PAUSE	 Pause / Step / Freeze	SKIP NEXT	 CH+ / Page+
STOP	 Stop / Hold	VOLUME DOWN	 Vol-
<<	 << / Tune-	DISPLAY	 Display / Media
>>	 >> / Tune+	SKIP PREV.	 CH- / Page-
I<<	 I<< / Preset-	1	 1
>>I	 >>I / Preset+	2	 2
OPEN / CLOSE	 Eject / Surround	3	 3
PROGRAM	 TV/Radio /	4	 4
CHECK	 Text / Goto	5	 5
VOLUME UP	 Up	6	 6
I<<	 Left	7	 7
INTRO	 OK	8	 8
>>I	 Right	9	 9
CLEAR	 Exit / Cancel / Clear	+10	 Guide / EPG / -/-
VOLUME DOWN	 Down	0	 0





Original	Substituto	Original	Substituto
AUX 1	 Red / Netflix / Search		
AUX 2	 Green / APP / Repeat		
6 CH	 Yellow / YouTube / Repeat		
SHUFFLE	 Blue / Prime Video / Random		
CD	 +  3 Shift + 3		
TAPE	 +  5 Shift + 5		
TUNER	 +  6 Shift + 6		

