 

 



 


 

 



 
 


 
 
 
 
 
 

 

 






 


 
 

 
 

 


 

 
 
 
 

 
 
 
 
 
 

 
 
 
 




Original		Substituto		Original		Substituto	
	Power		Power		Dn		DOWN
	12/24H		VOD		Right		RIGHT
	1		1		Left		LEFT
	2		2		OK		OK
	3		3		F1		OPT+
	4		4		F2		Audio
	5		5		F3		Subt.
	6		6		F4		TV/R
	7		7		F5		TEXT
	8		8		F6		SRC
	9		9		F7		V-FOR
	0		0		F8		WIDE
	Pause		Pause		F9		Red (A)
	Restart		BACK		F10		Green (B)
	Exit		EXIT		F11		Yellow (C)
	Select		MENU		F12		Blue (D)
	Up		UP				

