













 

 



 

 



 

 

 







Original	Substituto	Original	Substituto
	POWER		Power
	INFO		Info / Angle
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	SOURCE		AV / Input / RDS
	0		0
	AUDIO		Audio / Lang I/II
	FORMAT		Picture / Format
	BACK		Back / Return

Original	Substituto	Original	Substituto
	MENU		Menu / Home
	EXIT		Exit / Cancel / Clear
	UP		Up
	LEFT		Left
	ENTER		OK
	RIGHT		Right
	VOL+		Vol+
	DOWN		Down
	CH+		CH+ / Page+
	VOL-		Vol-
	CH-		CH- / Page-
	LIST		Smart / List
	SLEEP		Sleep / Timer
	EPG		Guide / EPG / -/-
	FAV		Fav / Marker / PC
	<<		<< / Tune-
	RED		Red / Netflix / Search





	Original	Substituto	Original	Substituto
	>>	>> / Tune+		
	GREEN	Green / APP / Repeat		
	I<<	I<< / Preset-		
	YELLOW	Yellow / YouTube / Repeat		
	BLUE	Blue / Prime Video / Random		
	>>I	>>I / Preset+		
	PLAY	Play / Slow		
	PAUSE	Pause / Step / Freeze		
	TEXT	Text / Goto		
	STOP	Stop / Hold		
	SUBTITLE	Subtitle / EQ		
	RADIO	TV/Radio /		
	OPT	Setup / OPT /		
	DMP	Display / Media		
	INDEX	D.Menu / Top		
	REC	Rec / Rec Mode		

