





 


 
 

 

 
 






 




 

 





 




Original	Substituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 HD	 Media
 VOD	 Smart
 Guide	 Guide
 Up	 Up
 Left	 Left

Original	Substituto
 OK	 Ok
 Right	 Right
 Down	 Down
 Retour	 Back
 Quitter	 Exit
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 ↑	 Shift + Ch +
 ↓	 Shift + Ch -
 Ch+	 Ch +
 Ch-	 Ch -
 Menu	 Menu
 Radio	 TV/R
 Red	 Red
 Green	 Green
 Yellow / Fav	 Yellow



