



Original	Substituto	Original	Substituto
	Power		Power
	Play		Play
	Stop		Stop
	Pause		Pause
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	TV/TXT		Text
	Cancel		Back
	Reveal		Eject
	Hold		Media
	Size		3D
	Subpage		D. Menu
	Index		List
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	CH+		Ch +
	CH-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Menu		Menu
	Source		AV
	DVB		Smart
	Exit		Exit
	OK		Ok
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	1		1
	2		2





Original	Substituto
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	SHIFT + -/-- Guide
Recall	FAV PRE-CH Pre Ch
PICTURE	SHIFT + PICTURE FORMAT Shift + Format
SOUND	SHIFT + SOUND DUAL Shift + Dual
NICAM/A2	SETTINGS OPT Options
MUTE	MUTE Mute
SLEEP	PROG SLEEP Sleep
TV/RADIO	SEARCH TV/R TV/R
FAV	SHIFT + FAV PRE-CH Shift + Pre Ch

Original	Substituto
FAV+	SHIFT + + CH Shift + Ch +
FAV-	SHIFT + - CH Shift + Ch -
PIC FORMAT	PICTURE FORMAT Format
SUBTITLE	AD SUBT Subt
TEXT	SHIFT + REPEAT TEXT Shift + Text
DISPLAY	DISPLAY INFO Info
LANGUAGE	SOUND DUAL Dual
EPG	-/-- GUIDE Guide

