
 
 






 



 




Original	Substituto	Original	Substituto
 Power	 Power	 Up	 Up
 Pause / Stop	 Pause	 Left / <<	 Left
 Pause / Stop	 Stop	 Left / <<	 <<
 I<<	 I<<	 Right / >>	 Right
 >>I	 >>I	 Right / >>	 >>
 CH +	 Ch +	 Play / Enter	 Ok
 CH -	 Ch -	 Play / Enter	 Play
 Vol +	 Vol +	 Down	 Down
 Vol -	 Vol -	 [...] Subt	 Subt
 *	 Smart	 Open / Close	 Eject
 Input	 AV	 Zoom	 Shift + Eject
 TV / DVD Mode	 TV/R	 [+]	 Info
 Mute	 Mute	 1	 1
 Language	 Dual	 2	 2
 DVD Menu	 D. Menu	 3	 3
 DVD Menu	 Menu	 4	 4
 Tools	 Options	 5	 5





Original	Substituto	Original	Substituto
	6		6
	7		7
	8		8
	9		9
	0		0
	--		Guide

Original	Substituto

