



Original	Substituto
 Power	 Power
 TXT	 Text / Goto
 MIX	 Smart / List
 Size	 Zoom / Size
 Index	 Info / Angle
 Hold	 Shift + Stop /
 Reveal	 D.Menu / Top
 Subcode	 Display / Media
 Cancel	 Shift + Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Substituto
 9	 9
 Timer	 Sleep / Timer
 0	 0
 Recall	 Back / Return
 Red/P.M.	 Red / Netflix / Search
 CH+	 CH+ / Page+
 Vol+	 Vol+
 Yellow/Sleep	 Yellow / YouTube / Repeat
 Green/S.M.	 Green / APP / Repeat
 CH-	 CH- / Page-
 Vol-	 Vol-
 Blue/Call	 Blue / Prime Video / Random
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Select	 OK





Original	Substituto
	Right
	Exit / Cancel / Clear
	Down
	Mute / Dimmer
	Picture / Format
	Setup / OPT /
	Subtitle / EQ
	Fav / Marker / PC
	TV/Radio /
	Guide / EPG / -/--
	Audio / Lang I/II
	Sound / Title
	+ Shift + 2
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	Eject / Surround

Original	Substituto
	I<< / Preset-
	<< / Tune-
	>> / Tune+
	>> / Preset+

