

Original	Substituto	Original	Substituto
Power ON/Off	 Power	Woofer/Speed	 Right
CD Play	 Play / Slow	Volume+	 Vol+
CD Pause	 Pause / Step / Freeze	Funct./Direct	 Smart / List
Stop	 Stop / Hold	Vol Rs+/S.Mode	 CH+ / Page+
CD Rewind	 << / Tune-	Volume-	 Vol-
CD F.FWD	 >> / Tune+	Display	 Display / Media
Prev./Prog-	 I<< / Preset-	Vol Rs-/Effect	 CH- / Page-
Next/Prog+	 >>I / Preset+	Pr 1	 1
Tape 2 Pre./eq	 Subtitle / EQ	Pr 2	 2
Tape 1 Hall/Ats	 Eject / Surround	Pr 3	 3
Sleep	 Sleep / Timer	Pr 4	 4
Program	 TV/Radio /	Pr 5	 5
CD/Theater	 Setup / OPT /	Pr 6	 6
Input/Source	 AV / Input / RDS	Repeat	 Green / APP / Repeat
Mode	 Menu / Home	CD Random	 Blue / Prime Video / Random
Tape 1 Preset	 Up	Tape 1 Play	 Shift + Play /
Preset Pause	 OK	Tape 1 Stop	 Shift + Stop /

Hold



The image shows a black remote control for a Mandis TV. The remote features a variety of buttons for controlling the television. At the top, there are buttons for Power (a red circle with a white power symbol), Dimmer Mute (a black circle with a white speaker icon and the text 'DIMMER MUTE'), and Shift (a yellow circle with the text 'SHIFT'). Below these are four colored buttons: TV (blue), DVD (blue), SAT (blue), and AUX (blue). The main section of the remote contains a grid of buttons for various functions: SLOW, STEP-FREEZE, HOLD, REC MODE, TUNE-, TUNE+, PRESET-, PRESET+, TITL, LANG III, EQ, SURROUND, SOUND, AUDIO, SUBTITLE, PROGRAM, FORMAT, SIZE, TIMER, TV/RADIO, PICTURE, ZOOM, SLEEP, RDS, TOP MENU, OPT-TOOLS, GOTO, and AV INPUT. Below this grid are buttons for HOME, MENU, INFO, and a central cluster of four blue directional buttons (up, down, left, right) surrounding an 'OK' button. Further down are CLEAR, EXIT, CANCEL, LIST, SMART, MEDIA, DISPLAY, RETURN, and BACK buttons. The bottom section includes a numeric keypad (0-9), a '+' button for VOL, a '-' button for VOL, a '+' button for CH PAGE, a '-' button for CH PAGE, and buttons for TV, DVD, CD-STE, VIDEO, TAPE, TUNER, AUX-HDD, USB, BLUETOOTH, PC, GUIDE EPG, and FAV MARKER. At the very bottom, there are four colored buttons: Netflix (red), App (green), YouTube (yellow), and Prime Video (blue). Below these are four buttons: SEARCH, REPEAT, REPEAT A-B, and RANDOM. The brand name 'Mandis' is printed in large, stylized letters in the center of the remote, and 'Mandis shop' is printed at the bottom, along with the website 'www.mandis.tv'.