

Original	Substituto	Original	Substituto
Power ON/Off	 Power	Woofer/Speed	 Right
CD Play	 Play / Slow	Volume+	 Vol+
CD Pause	 Pause / Step / Freeze	Funct./Direct	 Smart / List
Stop	 Stop / Hold	Vol Rs+/S.Mode	 CH+ / Page+
CD Rewind	 << / Tune-	Volume-	 Vol-
CD F.FWD	 >> / Tune+	Display	 Display / Media
Prev./Prog-	 I<< / Preset-	Vol Rs-/Effect	 CH- / Page-
Next/Prog+	 >>I / Preset+	Pr 1	 1
Tape 2 Pre./eq	 Subtitle / EQ	Pr 2	 2
Tape 1 Hall/Ats	 Eject / Surround	Pr 3	 3
Sleep	 Sleep / Timer	Pr 4	 4
Program	 TV/Radio /	Pr 5	 5
CD/Theater	 Setup / OPT /	Pr 6	 6
Input/Source	 AV / Input / RDS	Repeat	 Green / APP / Repeat
Mode	 Menu / Home	CD Random	 Blue / Prime Video / Random
Tape 1 Preset	 Up	Tape 1 Play	 Shift + Play /
Preset Pause	 OK	Tape 1 Stop	 Shift + Stop /

Hold



The image shows a black remote control for a Mandis TV. At the top, there are three buttons: a red power button, a black 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four blue buttons: 'TV', 'DVD', 'SAT', and 'AUX'. The next row contains 'SLOW', 'STEP - FREEZE', 'HOLD', and 'REC MODE'. The following row has 'TUNE-' (left arrow), 'TUNE+' (right arrow), 'PRESET-' (left arrow), and 'PRESET+' (right arrow). The next row includes 'TITLE', 'LANG VII', 'EQ', and 'SURROUND'. The following row has 'SOUND', 'AUDIO', 'SUBTITLE', and an up arrow. The next row includes 'FORMAT', 'SIZE', 'TIMER', and 'PROGRAM'. The following row has 'PICTURE', 'ZOOM', 'SLEEP', and 'TV/ RADIO'. The next row includes 'TOP MENU', 'OPT-TOOLS', 'GOTO', and 'RDS'. The final row in this section has 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. Below these are 'HOME' and 'ANGLE' buttons. The next row has 'MENU' and 'INFO'. The center features a directional pad with 'OK' in the middle. The next row has 'CLEAR', 'EXIT', 'CANCEL', 'LIST', 'SMART', 'MEDIA', 'DISPLAY', 'RETURN', and 'BACK'. The following row has 'VOL +', 'CH +', and 'CH PAGE'. The next row has 'VOL -', 'CH -', and 'CH PAGE'. The following row has 'TV', 'DVD', and 'CD - STB'. The next row has '1', '2', and '3'. The following row has '4', '5', and '6'. The next row has 'AUX - HDD', 'USB', and 'BLUETOOTH'. The following row has '7', '8', and '9'. The next row has 'HDMI - SAT', 'PC', and 'FAV MARKER'. The following row has 'GUIDE EPG', '0', and 'FAV MARKER'. The bottom row has 'NETFLIX', 'APP', 'YouTube', and 'Prime Video'. The bottom of the remote has 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM' buttons. The Mandis logo and website address 'www.mandis.tv' are at the very bottom.

Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW **STEP - FREEZE** **HOLD** **REC MODE**

TUNE- **TUNE+** **PRESET-** **PRESET+**

TITLE **LANG VII** **EQ** **SURROUND**

SOUND **AUDIO** **SUBTITLE** **▲**

FORMAT **SIZE** **TIMER** **PROGRAM**

PICTURE **ZOOM** **SLEEP** **TV/ RADIO**

TOP MENU **OPT-TOOLS** **GOTO** **RDS**

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **ANGLE**

MENU **INFO**

OK

CLEAR **RETURN**

EXIT **BACK**

CANCEL **LIST** **SMART** **MEDIA** **DISPLAY**

+ **CH +** **CH PAGE**

- **CH -** **CH PAGE**

TV **DVD** **CD - STB**

1 **2** **3**

4 **5** **6**

AUX - HDD **USB** **BLUETOOTH**

7 **8** **9**

HDMI - SAT **PC** **FAV MARKER**

GUIDE EPG **0** **FAV MARKER**

NETFLIX **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis
shop
www.mandis.tv