









































 





























Original	Substituto	Original	Substituto
 Power	 Power	 Blue	 Blue / Prime Video / Random
 Mute	 Mute / Dimmer	 Source	 AV / Input / RDS
 1	 1	 Vol+	 Vol+
 2	 2	 Vol-	 Vol-
 3	 3	 CH+	 CH+ / Page+
 4	 4	 CH-	 CH- / Page-
 5	 5	 Audio	 Audio / Lang I/II
 6	 6	 Aspect	 Eject / Surround
 7	 7	 Display	 Display / Media
 8	 8	 Tv/Radio	 TV/Radio /
 9	 9	 Rec	 Rec / Rec Mode
 0	 0	 Up	 Up
 -/--	 Shift + Guide / EPG / -/--	 Left	 Left
 Recall	 Back / Return	 OK/CH List	 OK
 Red	 Red / Netflix / Search	 Right	 Right
 Green	 Green / APP / Repeat	 Down	 Down
 Yellow	 Yellow / YouTube / Repeat	 Menu	 Menu / Home

Original	Substituto	Original	Substituto
 Power	 Mute / Dimmer	 TV	 DVD
 Mute	 Shift	 SAT	 AUX
 1	 Slow	 Step-Freeze	 Hold
 2	 Tune-	 Preset-	 Rec Mode
 3	 Tune+	 Preset+	 TV
 4	 Title	 EQ	 DVD
 5	 Lang I/II	 Surround	 SAT
 6	 Sound	 Program	 AUX
 7	 Format	 TV Radio	 Slow
 8	 Picture	 RDS	 Step-Freeze
 9	 Zoom	 AV Input	 Hold
 0	 Top Menu	 D.Menu	 Preset-
 -/--	 Opt-Tools	 Setup	 Preset+
 Recall	 Goto	 Text	 Tune-
 Red	 Home	 AV Input	 Tune+
 Green	 Menu	 Home	 Preset-
 Yellow	 OK	 Menu	 Preset+





Original	Substituto
Exit	Exit / Cancel / Clear
EPG	Guide / EPG / -/--
P.Mode	Picture / Format
S.Mode	Sound / Title
Sleep	Sleep / Timer
Text	Text / Goto
PVR/Hold	Setup / OPT /
Size	Zoom / Size
FAV	Fav / Marker / PC
Play	Play / Slow
Pause/Timeshift	Pause / Step / Freeze
Stop/Auto	Stop / Hold
Reveal	D.Menu / Top
Subtitle	Subtitle / EQ
<</Nicam	<< / Tune-
>>/Freeze	>> / Tune+
I<</Index	I<< / Preset-

Original	Substituto
>>I/Subpage	>>I / Preset+

