




 



 
 
 

 



 

 
 

 
 

 

 







 
 



 

 
 


 


 
 


 
 



 



 


 





Original	Substituto	Original	Substituto
 Power	 Power	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Home	 Smart
 3	 3	 G	 Guide
 4	 4	 i	 Info
 5	 5	 Back	 Back
 6	 6	 Exit	 Exit
 7	 7	 Up	 Up
 8	 8	 Down	 Down
 9	 9	 Right	 Right
 0	 0	 Left	 Left
 Lang	 Dual	 OK	 Ok
 TXT	 Text	 Netflix	 Media
 Vol+	 Vol +	 YouTube	 Shift + Media
 Vol-	 Vol -	 *1	 Format
 Mute	 Mute	 Prime Video	 Shift + Smart
 Source	 AV	 Red	 Red

Original	Substituto	Original	Substituto
 P+	 Ch +	 TV	 MUTE
 P-	 Ch -	 DVD	 SHIFT
 Home	 Smart	 SAT	 AUX
 G	 Guide	 PLAY MODE	 REC MODE
 i	 Info	 TV	 DUAL
 Back	 Back	 SAT	 SUBT
 Exit	 Exit	 AUX	 OPT
 Up	 Up	 DISC NAV	 AD
 Down	 Down	 SOUND	 SETTINGS
 Right	 Right	 LIST	 DUAL
 Left	 Left	 SUBT	 OPT
 OK	 Ok	 PROG	 PICTURE
 Netflix	 Media	 SLEEP	 FORMAT
 YouTube	 Shift + Media	 TV/R	 3D
 *1	 Format	 REPEAT	 TIMER
 Prime Video	 Shift + Smart	 ZOOM	 AV
 Red	 Red	 D.MENU	 TEXT



