
 
 
































Original	Substituto	Original	Substituto
	Power		Power
	TV / DTV		Setup / OPT /
	Source		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Recall		Back / Return
	0		0
	Info		Info / Angle
	FAV		Fav / Marker / PC
	Picture		Picture / Format

Original	Substituto	Original	Substituto
	Sound		Sound / Title
	Vol +		Vol+
	CH +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer
	CH -		CH- / Page-
	Menu		Menu / Home
	EPG		Guide / EPG / -/-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	I / II		Audio / Lang I/II
	Still		Pause / Step / Freeze
	Zoom		Zoom / Size
	Exit		Exit / Cancel / Clear





Original	Substituto
Radio / Browse	TV/Radio /
T.Shift / Rotate	D.Menu / Top
Lang / Page up	Shift + Audio / Lang I/II
Lang / Page up	Shift + CH+ /
Subtitle / Page down	Subtitle / EQ
Subtitle / Page down	Shift + CH- /
DMP	Smart / List
PVR	Display / Media
Play / Pause	Play / Slow
Stop	Stop / Hold
Red / <<<	Red / Netflix / Search
Red / <<<	<<< / Tune-
Green / >>>	Green / APP / Repeat
Green / >>>	>>> / Tune+
Yellow / I<<<	Yellow / YouTube / Repeat
Yellow / I<<<	I<<< / Preset-
Blue / >>>I	Blue / Prime Video / Random

Original	Substituto
Blue / >>>I	>>>I / Preset+
Text	Text / Goto
Size	Shift + Zoom /
Reveal	Shift + Smart / List
Cancel	Shift + Exit / Cancel / Clear
Hold / Sleep	Sleep / Timer
Hold / Sleep	Shift + Stop /
Index	Shift + Display / Media
Sub.Code	Eject / Surround
Mix	Shift + Text /

