

 
 
 

 






 

 



 
 


 
 
 
 










 

 



 
 
 






Original	Substituto	Original	Substituto
 Power	 Power	 Dev.List	 List
 Mute	 Mute	 Video	 Guide
 1	 1	 Subtitle	 Subt
 2	 2	 Text	 Text
 3	 3	 Auto	 Options
 4	 4	 Menu	 Menu
 5	 5	 Zoom	 Eject
 6	 6	 Info	 Info
 7	 7	 Exit	 Exit
 8	 8	 CH+	 Ch +
 9	 9	 CH-	 Ch -
 0	 0	 Up	 Up
 FAV	 Pre Ch	 Down	 Down
 Recall	 Back	 Right	 Right
 Lang	 Dual	 Left	 Left
 Time Shift	 Smart	 Enter	 Ok
 Tv/Radio	 TV/R	 Vol+	 Vol +





Original	Substituto	Original	Substituto
	VOL -		
	APP MEDIA		
	REC MODE		
			
	PLAY MODE		
			
			
			
			
			
	A		
	B		
	C		
	D		

