 

 










 

 

 

 

 

 

 

 

 

 





Original	Substituto	Original	Substituto
 Power	 Power	 3D	 Shift + 3
 1	 1	 ?	 Info / Angle
 2	 2	 @	 D.Menu / Top
 3	 3	 Menu	 Menu / Home
 4	 4	 Up	 Up
 5	 5	 ←	 Back / Return
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Tools	 Setup / OPT /
 FAV	 Fav / Marker / PC	 Down	 Down
 0	 0	 Guide/Home	 Guide / EPG / -/--
 TXT	 Text / Goto	 Guide/Home	 Smart / List
 Red	 Red / Netflix / Search	 Vol+	 Vol+
 Green	 Green / APP / Repeat	 Source	 AV / Input / RDS
 Yellow	 Yellow / YouTube / Repeat	 PR+	 CH+ / Page+
 Blue	 Blue / Prime Video / Random	 Vol-	 Vol-





Original	Substituto	Original	Substituto
	Mute		Mute / Dimmer
	PR-		CH- / Page-
	I<		I<< / Preset-
	>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	Rec List		Display / Media
	OQ		Audio / Lang I/II
	[-]		Subtitle / EQ

