



Original		Substituto		Original		Substituto	
	Power		Power		CH+		CH +
	Source		Audio		CH-		CH -
	1		1		Menu		MENU
	2		2		Back		BACK
	3		3		Info		INFO
	4		4		OK		OK
	5		5		Up		UP
	6		6		Down		DOWN
	7		7		Right		RIGHT
	8		8		Left		LEFT
	9		9		SAP		MEDIA
	0		0		Mode/Auto		OPT+
	PREV.CH		P/C / FAV		Freeze		Pause
	.		-/-- / EPG		Sleep		VOD
	Mute		MUTE		Format		V-FOR
	Vol+		VOL +				
	Vol-		VOL -				

