



Original	Substituto	Original	Substituto
Power	Power	Angle/Audio	Audio / Lang I/II
Open/Close	Eject / Surround	Angle/Audio	Info / Angle
1	1	Prog/Repeat	Green / APP / Repeat
2	2	Prog/Repeat	TV/Radio /
3	3	Setup	Setup / OPT /
4	4	Stop	Stop / Hold
5	5	Play	Play / Slow
6	6	Pause	Pause / Step / Freeze
7	7	Left	Left
8	8	Up	Up
9	9	Right	Right
Menu/Zoom	Zoom / Size	OK	OK
Menu/Zoom	Menu / Home	Down	Down
0	0	<<	<< / Tune-
USB	+ Shift + 8	>>	>> / Tune+
Title/Subtitle	Sound / Title	Vol+	Vol+
Title/Subtitle	Subtitle / EQ	I<<	I<< / Preset-

Original	Substituto	Original	Substituto
Angle/Audio	Audio / Lang I/II	Angle/Audio	Info / Angle
Prog/Repeat	Green / APP / Repeat	Prog/Repeat	TV/Radio /
Setup	Setup / OPT /	Stop	Stop / Hold
Play	Play / Slow	Pause	Pause / Step / Freeze
Left	Left	Up	Up
Right	Right	OK	OK
Down	Down	<<	<< / Tune-
>>	>> / Tune+	Vol+	Vol+
I<<	I<< / Preset-		





Original	Substituto	Original	Substituto
NEXT >>	PRESET+ >> / Preset+		
VOL-	VOL-		
MUTE	DIMMER MUTE Mute / Dimmer		
GOTO	GOTO TEXT Text / Goto		
DISPLAY	MEDIA DISPLAY Display / Media		

