

 

 



 



 





Original	Substituto	Original	Substituto
	Power		Power
	Goto		Text / Goto
	Source		AV / Input / RDS
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	10+		Guide / EPG / -/--
	Step	+	Shift + Pause / Step /
	Subtitle		Subtitle / EQ

Original	Substituto	Original	Substituto
	Angle		Info / Angle
	Audio		Audio / Lang I/II
	PBC		Fav / Marker / PC
	Title		Sound / Title
	Up		Up
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Left		Left
	Enter		OK
	Right		Right
	Slow	+	Shift + Play /
	Setup		Setup / OPT /
	Down		Down
	Zoom		Zoom / Size
	Menu		Menu / Home
	Repeat		Green / APP / Repeat





	Original	Substituto	Original	Substituto
	 AB	 Yellow / YouTube / Repeat		
	 I<<	 I<< / Preset-		
	 >>I	 >>I / Preset+		
	 Program	 TV/Radio /		
	 Display	 Display / Media		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		

