 

 
 
 




 
 






 
 




 
 
 
 

 
 
 
 
 

 

 

 
 
 

 
 

 
 
 

 
 
 
 
 

 







 








Original	Substituto	Original	Substituto
 On	 Power	 OK	 Ok
 Standby	 Smart	 Up	 Up
 Play	 Play	 Down	 Down
 >>	 >>	 Right	 Right
 <<	 <<	 Left	 Left
 Pause	 Pause	 A/V Mute	 AV
 Stop	 Stop	 Aspect	 Format
 >>	 >>	 Pattern	 D. Menu
 <<	 <<	 Split	 Text
 Mute	 Mute	 RGBCMY	 Subt
 Vol+	 Vol +	 Auto Iris	 Dual
 Vol-	 Vol -	 2D/3D	 TV/R
 HDMI Link	 Media	 Color Mode	 Shift + Format
 Link Menu	 Info	 Memory	 Red
 Menu	 Menu	 USB	 1
 Esc	 Exit	 HDMI1	 2
 Default	 Back	 HDMI2	 3





Original	Substituto	Original	Substituto
 Wireless HD	 4		
 Component	 5		
 Video	 6		
 PC	 7		
 User	 B		Green

