




Original	Substituto	Original	Substituto
 Power	 Power	 Up / CH+	 Ch +
 Mute	 Mute	 Down / CH-	 Down
 1	 1	 Down / CH-	 Ch -
 2	 2	 Right / Vol+	 Right
 3	 3	 Right / Vol+	 Vol +
 4	 4	 Left / Vol-	 Left
 5	 5	 Left / Vol-	 Vol -
 6	 6	 OK	 Ok
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 TXT	 Text
 0	 0	 EPG	 Guide
 SUBTL	 Subt	 Info	 Info
 TV / Sat	 AV	 Audio	 Dual
 16:9	 Format	 M-P	 Smart
 Sleep	 Sleep	 Page+	 >>
 Up / CH+	 Up	 Page-	 <<

Original	Substituto	Original	Substituto
 MUTE	 MUTE	 SHIFT	
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 >>>	 ■
 >>>			 ■
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>
 >>>	 >>>	 >>>	 >>>



