




Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substituto	Original	Substituto
	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down

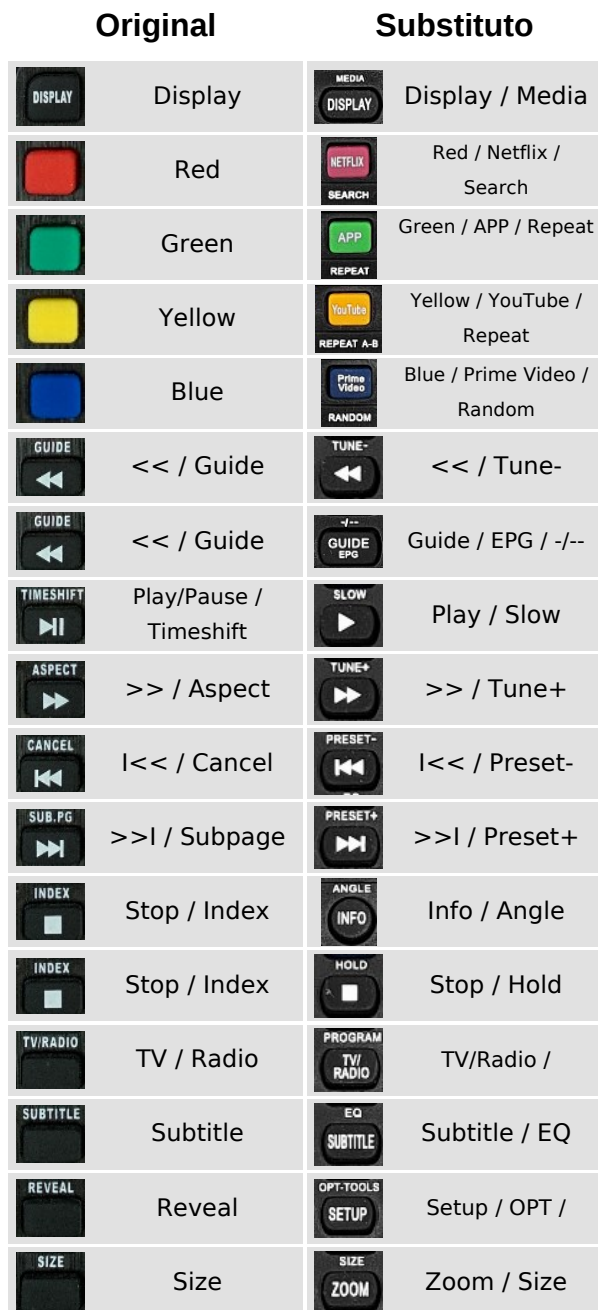

[illegible]



Original	Substituto	Original	Substituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV/ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer

Original	Substituto	Original	Substituto
	Vol+		Vol+
	MTS		Setup / OPT /
	CH+		CH+ / Page+
	Vol-		Vol-
	RecList		Smart / List
	CH-		CH- / Page-
	FAV/List		Fav / Marker / PC
	Rec		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





The image shows a black remote control for a Mandis TV. At the top, there are three buttons: a red power button, a black 'DIMMER MUTE' button, and a yellow 'SHIFT' button. Below these are four blue buttons labeled 'TV', 'DVD', 'SAT', and 'AUX'. The next row contains 'SLOW', 'STEP - FREEZE', 'HOLD', and 'REC MODE'. The following row has 'PLAY', 'PAUSE', 'STOP', and a red 'POWER' button. The next row includes 'TUNE-', 'TUNE+', 'PRESET-', and 'PRESET+'. The following row has left and right arrow buttons, 'EQ', and a 'SURROUND' button. The next row includes 'SOUND', 'AUDIO', 'SUBTITLE', and an up arrow button. The following row has 'FORMAT', 'SIZE', 'TIMER', and 'PROGRAM'. The next row includes 'PICTURE', 'ZOOM', 'SLEEP', and 'TV / RADIO'. The following row has 'TOP MENU', 'OPT-TOOLS', 'GOTO', and 'RDS'. The next row includes 'D.MENU', 'SETUP', 'TEXT', and 'AV INPUT'. Below this is a row with 'HOME', 'MENU', 'ANGLE', and 'INFO'. The center features a directional pad with 'OK' in the middle. To the left of the pad are 'CLEAR', 'EXIT', and 'CANCEL' buttons. To the right are 'RETURN', 'BACK', and a '+ CH PAGE' button. Below the directional pad are 'LIST', 'SMART', 'MEDIA', and 'DISPLAY' buttons. The bottom section has a numeric keypad (0-9) with labels like 'TV', 'DVD', 'CD - STB', 'VIDEO', 'TAPE', 'TUNER', 'AUX - HDD', 'USB', 'BLUETOOTH', 'HDMI - SAT', and 'PC'. There are also 'GUIDE EPG' and 'FAV MARKER' buttons. At the very bottom, there are four colored buttons: 'Netflix' (red), 'APP' (green), 'YouTube' (orange), and 'Prime Video' (blue). Below these are the labels 'SEARCH', 'REPEAT', 'REPEAT A-B', and 'RANDOM'. The Mandis logo and website address 'www.mandis.tv' are at the bottom.

Power **DIMMER MUTE** **SHIFT**

TV **DVD** **SAT** **AUX**

SLOW **STEP - FREEZE** **HOLD** **REC MODE**

PLAY **PAUSE** **STOP** **POWER**

TUNE- **TUNE+** **PRESET-** **PRESET+**

LEFT **RIGHT** **EQ** **SURROUND**

SOUND **AUDIO** **SUBTITLE** **UP**

FORMAT **SIZE** **TIMER** **PROGRAM**

PICTURE **ZOOM** **SLEEP** **TV / RADIO**

TOP MENU **OPT-TOOLS** **GOTO** **RDS**

D.MENU **SETUP** **TEXT** **AV INPUT**

HOME **MENU** **ANGLE** **INFO**

OK

CLEAR **EXIT** **CANCEL** **RETURN** **BACK**

+ **VOL** **+** **CH PAGE**

TV **DVD** **CD - STB**

1 **2** **3**

VIDEO **TAPE** **TUNER**

4 **5** **6**

AUX - HDD **USB** **BLUETOOTH**

7 **8** **9**

PC

GUIDE EPG **0** **FAV MARKER**

Netflix **APP** **YouTube** **Prime Video**

SEARCH **REPEAT** **REPEAT A-B** **RANDOM**

Mandis
shop
www.mandis.tv