

 



 



 

 

 

 












 
 

 


 
 



 

 



 
 




 





 



 









Original	Substituto	Original	Substituto
 Power	 Power	 Menu	 Menu / Home
 Mute	 Mute / Dimmer	 Info	 Info / Angle
 1	 1	 Source	 AV / Input / RDS
 2	 2	 Exit	 Exit / Cancel / Clear
 3	 3	 Up	 Up
 4	 4	 Down	 Down
 5	 5	 Left	 Left
 6	 6	 Right	 Right
 7	 7	 OK	 OK
 8	 8	 Vol+	 Vol+
 9	 9	 Vol-	 Vol-
 0	 0	 FAV+	 Shift + CH+ /
 FAV	 Fav / Marker / PC	 FAV-	 Shift + CH- /
 Recall	 Back / Return	 EPG	 Guide / EPG / -/-
 P.Mode	 Picture / Format	 CH+	 CH+ / Page+
 S.Mode	 Sound / Title	 CH-	 CH- / Page-
 Audio	 Audio / Lang I/II	 Aspect	 D.Menu / Top

Original	Substituto	Original	Substituto
 Menu	 Menu / Home	 Menu / Home	 Menu / Home
 Info	 Info / Angle	 Info / Angle	 Info / Angle
 Source	 AV / Input / RDS	 AV / Input / RDS	 AV / Input / RDS
 Exit	 Exit / Cancel / Clear	 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Up	 Up	 Up	 Up
 Down	 Down	 Down	 Down
 Left	 Left	 Left	 Left
 Right	 Right	 Right	 Right
 OK	 OK	 OK	 OK
 Vol+	 Vol+	 Vol+	 Vol+
 Vol-	 Vol-	 Vol-	 Vol-
 FAV+	 Shift + CH+ /	 Shift + CH+ /	 Shift + CH+ /
 FAV-	 Shift + CH- /	 Shift + CH- /	 Shift + CH- /
 EPG	 Guide / EPG / -/-	 Guide / EPG / -/-	 Guide / EPG / -/-
 CH+	 CH+ / Page+	 CH+ / Page+	 CH+ / Page+
 CH-	 CH- / Page-	 CH- / Page-	 CH- / Page-
 Aspect	 D.Menu / Top	 D.Menu / Top	 D.Menu / Top





Original	Substituto	Original	Substituto
	Sleep		Sleep / Timer
	Rec		Rec / Rec Mode
	Tv/R		TV/Radio /
	Freeze		Pause / Step / Freeze
	Sub-T		Subtitle / EQ
	PVR-List		Smart / List
	TSR		Shift + TV/Radio / Program
	TTX		Text / Goto
	Hold		Shift + Stop /
	Reveal		Display / Media
	Sub-P		Shift + Subtitle / EQ
	Index		Shift + Info / Angle
	Zoom		Zoom / Size
	Play/Pause		Play / Slow
	Stop		Stop / Hold
	<<		<< / Tune-
	>>		>> / Tune+

Original	Substituto	Original	Substituto
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

