

 

 
 
 

 

 

 

 




 



 





 


 


 



 
 
 

 






 


 

 
 


 



 








Original	Substituto	Original	Substituto
 Standby	 Power	 Right	 Right
 Rec PVR	 Rec	 Vol+	 Vol +
 List PVR	 Smart	 Favourite	 Pre Ch
 Mute	 Mute	 CH-	 Ch -
 EPG	 Guide	 Down	 Down
 Info	 Info	 Tv/Radio	 TV/R
 TTX	 Text	 1	 1
 Audio	 Dual	 2	 2
 DTV/VCR	 Media	 3	 3
 Subtitle	 Subt	 Recall	 Back
 Menu	 Menu	 4	 4
 CH+	 Ch +	 5	 5
 Up	 Up	 6	 6
 Exit	 Exit	 Goto	 Options
 Left	 Left	 7	 7
 Vol-	 Vol -	 8	 8
 OK	 Ok	 9	 9



 



 

 
 
 

 

 

 



 



 








 




 







 



 



 

 







 
 






Original	Substituto	Original	Substituto
	0		0
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Repeat	+	Shift + Text
	Red	<b>A</b>	Red
	Green	<b>B</b>	Green
	Yellow	<b>C</b>	Yellow
	Blue	<b>D</b>	Blue

Original	Substituto





Original	Substituto	Original	Substituto
 Standby	 Power	 Down	 Down
 Rec PVR	 Rec	 Right	 Right
 List PVR	 Smart	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Media	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Favourite	 Pre Ch	 7	 7
 Tv/Radio	 TV/R	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





Original	Substituto	Original	Substituto
	Goto		AV
	<<		<<
	>>		>>
	I<<		I<<
	>>I		>>I
	Play		Play
	Pause		Pause
	Stop		Stop
	Repeat	+	Shift + Text
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue

Original	Substituto

