 

 
 

 

 




Original	Substituto	Original	Substituto
 Power	 Power	 Down / CH-	 Ch -
 Mute	 Mute	 Right / Vol+	 Right
 1	 1	 Right / Vol+	 Vol +
 2	 2	 Left / Vol-	 Left
 3	 3	 Left / Vol-	 Vol -
 4	 4	 OK / Store	 Ok
 5	 5	 P-	 Shift + Ch -
 6	 6	 P+	 Shift + Ch +
 7	 7	 EPG	 Guide
 8	 8	 Back	 Back
 9	 9	 i	 Info
 0	 0	 Subtitle	 Subt
 Menu	 Menu	 Text	 Text
 Exit	 Exit	 Aspect	 Format
 Up / CH+	 Up	 Picture	 Shift + Format
 Up / CH+	 Ch +	 Audio	 Dual
 Down / CH-	 Down	 Sleep	 Sleep

Original	Substituto	Original	Substituto
 Down / CH-	 Ch -	 TV	 AUX
 Right / Vol+	 Right	 DVD	 SAT
 Right / Vol+	 Vol +	 PLAY MODE	 REC MODE
 Left / Vol-	 Left	 FF	 ■
 Left / Vol-	 Vol -	 SOUND	 AD
 OK / Store	 Ok	 DISC NAV	 SETTINGS
 P-	 Shift + Ch -	 LIST	 DUAL
 P+	 Shift + Ch +	 SUBT	 OPT
 EPG	 Guide	 PROG	 SEARCH
 Back	 Back	 PICTURE	 ECO
 i	 Info	 SLEEP	 TV/R
 Subtitle	 Subt	 E-MANUAL	 REPEAT
 Menu	 Menu	 D.MENU	 TEXT
 Exit	 Exit	 ZOOM	 TIMER
 Up / CH+	 Up	 TOP MENU	 DISPLAY INFO
 Up / CH+	 Ch +	 MENU	 OK
 Down / CH-	 Down	 CLEAR	 EXIT
		 RETURN BACK	 BACK
		 VOL +	 HOME
		 VOL -	 SMART
		 1	 APP
		 2	 MEDIA
		 3	 CH +
		 4	 CH -
		 5	
		 6	
		 7	
		 8	
		 9	
		 GUIDE	 FAV
		 0	 PRE-CH
		 A	 B
		 C	 D
			
			



