



Original	Substituto	Original	Substituto
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute

Original	Substituto	Original	Substituto
	World/Internet		Smart
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	i		Info
	Photo/Music/Cam		Media
	Guide		Guide
	*/O		Format
	*/Q		3D





Original	Substituto	Original	Substituto
[≡]/Text	REPEAT TEXT		
Red	A Red		
Green	B Green		
Yellow	C Yellow		
Blue	D Blue		
LANG.	SOUND DUAL		
[≡].	AD SUBT		
[-O-]	ZOOM		
<<	<<		
Pause	Pause		
>>	>>		
Rec	REC MODE		
Play	PLAY MODE		
Stop	Stop		

Original	Substituto

