






















































 





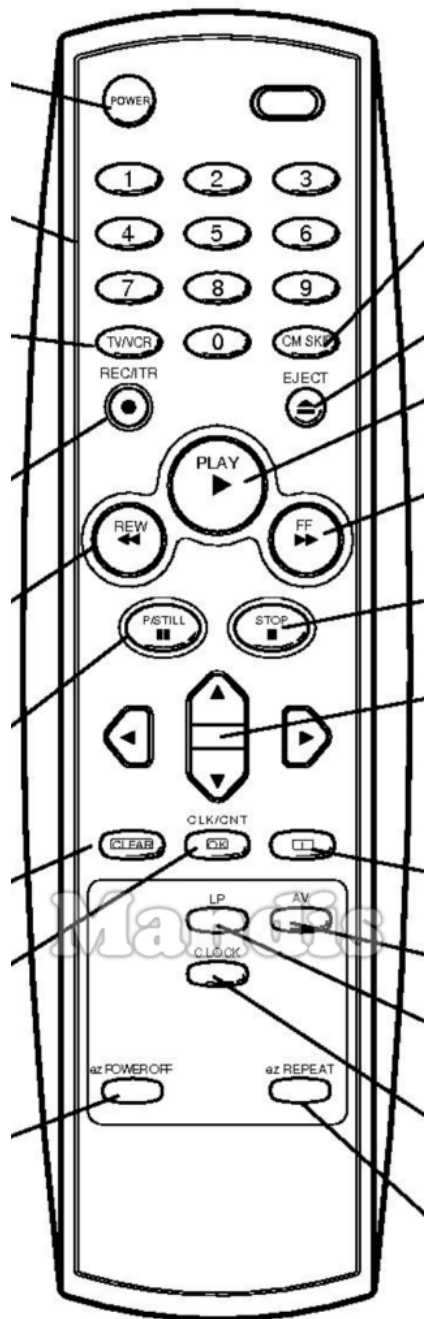





















Original	Substituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV/VCR	 Smart / List
 0	 0
 CM-Skip	 Display / Media
 REC / ITR	 Rec / Rec Mode
 Eject	 Eject / Surround
 Play	 Play / Slow
 << REW	 << / Tune-

Original	Substituto
 << REW	 I<< / Preset-
 >> F FWD	 >> / Tune+
 >> F FWD	 >>I / Preset+
 Pause/Still	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Left	 Left
 Up	 Up
 Right	 Right
 Down	 Down
 Clear	 Exit / Cancel / Clear
 OK / CLK / CNT	 OK
 i	 Info / Angle
 LP	 Text / Goto
 AV	 AV / Input / RDS
 C.Lock	 TV/Radio /






Original	Substituto	
On/Off		Power
Audio Out		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
F.Adv		Sound / Title
Audio		Audio / Lang I/II
Case Tape		Eject / Surround
Mon/TV		Picture / Format
Sp/Lp/Speed		Zoom / Size
Timer/Sleep		Sleep / Timer
Progr/C/CH		TV/Radio /

Original	Substituto	
Auto/Track		D.Menu / Top
T.Set/Clock		Setup / OPT /
Video/Go-To		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
Slow/Dpss+		Vol+
VCR/TV		Smart / List
Tracking+		CH+ / Page+
Slow/Dpss-		Vol-
Display		Display / Media
Tracking-		CH- / Page-




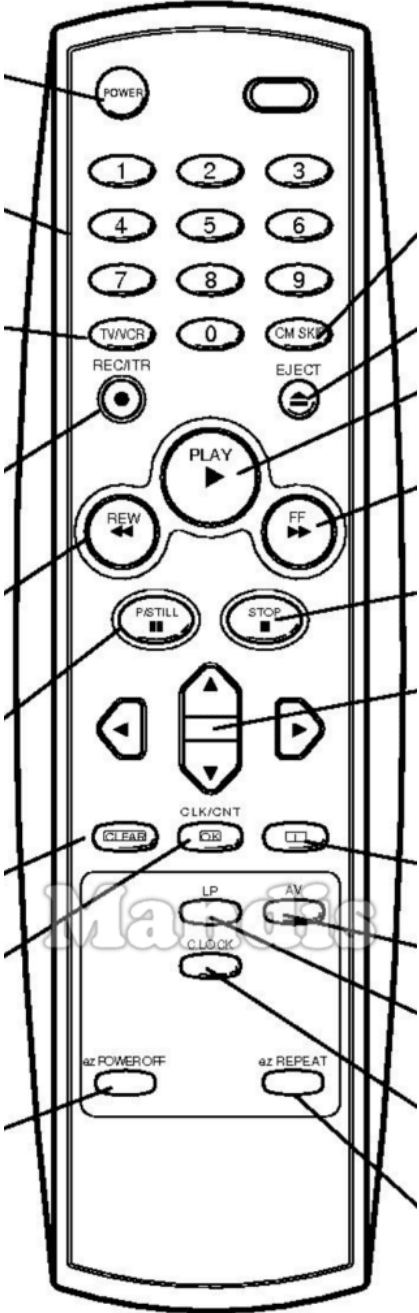







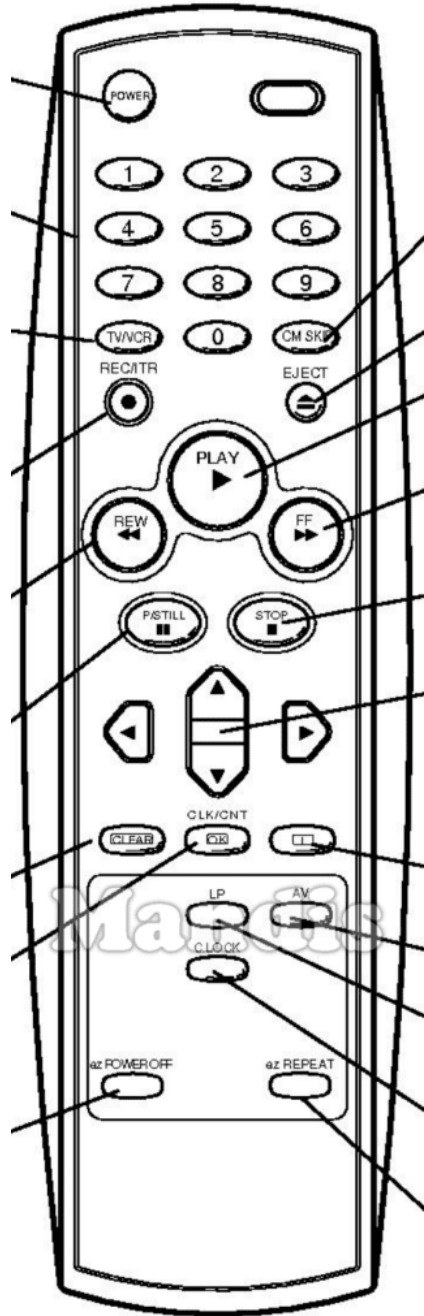















 
 






Original	Substituto	
1	1 TV	1
2	2 DVD	2
3	3 CD - STB	3
4	4 VIDEO	4
5	5 TAPE	5
6	6 TUNER	6
7	7 AUX - HDD	7
8	8 USB	8
9	9 BLUETOOTH	9
-/--	GUIDE EPG	Guide / EPG / -/--
0	0 HDMI - BAT	0
Ch.Memo	PC FAV MARKER	Fav / Marker / PC
Repeat	APP REPEAT	Green / APP / Repeat
Slow Down	SHIFT + SLOW	Shift + Play /
Clear 00:00	SHIFT + CLEAR EXIT CANCEL	Shift + Exit / Cancel / Clear
Index Pict+	SHIFT + + CH PAGE	Shift + CH+ /
Index Pict-	SHIFT + - CH PAGE	Shift + CH- /

Original	Substituto












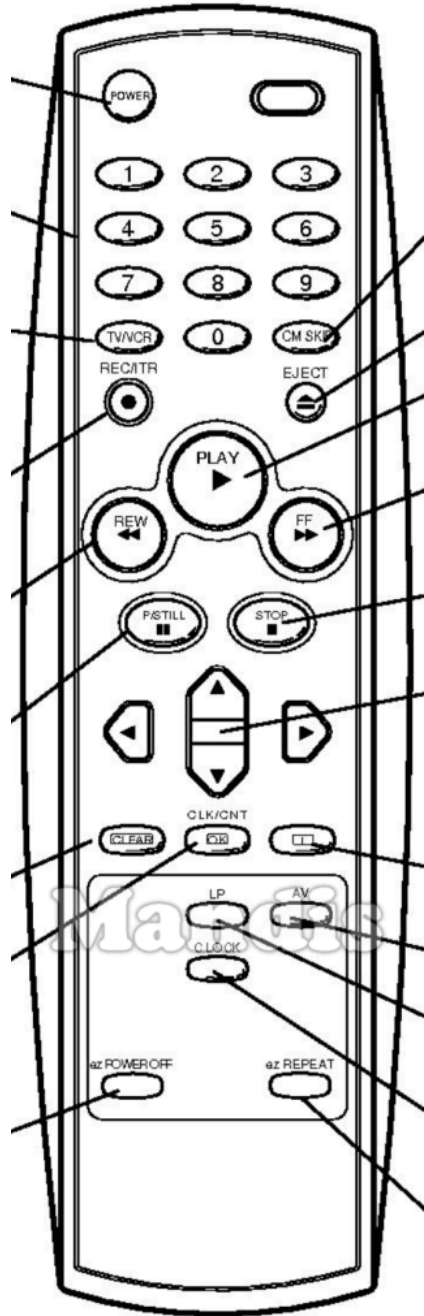














 









 
 
Original	Substituto	
On/Off		Power
Audio Out		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Audio Dub		Sound / Title
Audio		Audio / Lang I/II
Rec/Mode		Subtitle / EQ
Eject/Reverse		Eject / Surround
Mon/TV		Picture / Format
Sp/Lp/Speed		Zoom / Size
Timer/Record		Sleep / Timer

Original	Substituto	
Progr/C/CH		TV/Radio /
Auto/Track		D.Menu / Top
T.Set/Clock		Setup / OPT /
Video/Go-To		Text / Goto
Input Source		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Show View		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Exit		Exit / Cancel / Clear
Menu Down		Down
F.Adv		Back / Return
Slow/Dpss+		Vol+
VCR/TV		Smart / List
Chan+		CH+ / Page+





Original	Substituto	
Slow/Dpss-		Vol-
Display		Display / Media
Chan-		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
-/--		Guide / EPG / -/--
0		0
Ch.Memo		Fav / Marker / PC
Counter Clock		Red / Netflix / Search
Count Remain		Green / APP / Repeat

Original	Substituto	
Counter Stop		Yellow / YouTube / Repeat
Counter Reset		Blue / Prime Video / Random
Slow Down		Shift + Play /
Rec. On/Off		Shift + Rec / Rec Mode
X2 Rew/Play		Shift + << /
Frame Down		Shift + I<< / Preset-
Frame Up		Shift + >>I / Preset+
Index Pict+		Shift + Up
Set-		Shift + Left
Set+		Shift + Right
Index Pict-		Shift + Down
Otr/A.Otr		Shift + Smart / List
Tracking+		Shift + CH+ /
Vps/Pdc		Shift + Display / Media
Tracking-		Shift + CH- /
Search Index		Shift + Red / Netflix /

