


 
 
 
 
 
 
 




 




 

 

 

 

 
 
 
 

 


 




| Original  | Substituto | Original  | Substituto     |
|---|------------|---|----------------|
|    | Power      |    | Power          |
|    | Mute       |    | Mute           |
|    | 1          |    | 1              |
|    | 2          |    | 2              |
|    | 3          |    | 3              |
|    | 4          |    | 4              |
|    | 5          |    | 5              |
|    | 6          |    | 6              |
|    | 7          |    | 7              |
|    | 8          |    | 8              |
|   | 9          |   | 9              |
|  | 0          |    | 0              |
|  | --/10+     |  +  | Shift + Guide  |
|  | Recall     |    | Back           |
|  | Subtitle   |    | Subt           |
|  | P.Mode     |  +  | Shift + Format |
|  | S.Mode     |    | Dual           |

| Original  | Substituto | Original  | Substituto |
|---|------------|---|------------|
|    | MTS        |    | Media      |
|    | Sleep      |    | Sleep      |
|    | Source     |    | AV         |
|    | CH+        |    | Ch +       |
|    | CH-        |    | Ch -       |
|    | Vol+       |    | Vol +      |
|    | Vol-       |    | Vol -      |
|    | Info       |    | Info       |
|    | Freeze     |    | Red        |
|    | CH.List    |    | List       |
|   | Auto       |   | Yellow     |
|  | Aspect     |  | Format     |
|  | Up         |  | Up         |
|  | Down       |  | Down       |
|  | OK         |  | Ok         |
|  | Right      |  | Right      |
|  | Left       |  | Left       |





| Original  |                  | Substituto  |              | Original  |    | Substituto  |    |
|---|------------------|---|--------------|---|----|---|----|
|    | Menu             |    | Menu         |  | << |  | << |
|    | Exit             |    | Exit         |  | >> |  | >> |
|    | CC               |    | Smart        |   |    |   |    |
|    | Eject / V-Chip   |    | Eject        |   |    |   |    |
|    | Play/Pause / FAV |    | Play         |   |    |   |    |
|    | Play/Pause / FAV |    | Pre Ch       |   |    |   |    |
|    | Stop/ADD/Erase   |    | Stop         |   |    |   |    |
|    | Title            |    | Options      |   |    |   |    |
|    | Setup/EPG        |    | Guide        |   |    |   |    |
|    | Audio            |    | Shift + Dual |   |    |   |    |
|   | Goto             |   | TV/R         |   |    |   |    |
|  | A-B              |  | Shift + Text |   |    |   |    |
|  | Menu (lower)     |  | D. Menu      |   |    |   |    |
|  | Slow             |  | Pause        |   |    |   |    |
|  | Repeat           |  | Text         |   |    |   |    |
|  | <<               |  | <<           |   |    |   |    |
|  | >>               |  | >>           |   |    |   |    |

