



Original	Substituto
 Standby-On	 Power
 Timer Prog	 Sleep / Timer
 Input Select	 AV / Input / RDS
 Open/Close / Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 System	 Shift + Setup / OPT / Tools
 0	 0

Original	Substituto
 Setup	 Setup / OPT /
 Audio	 Audio / Lang I/II
 Clear	 Exit / Cancel / Clear
 Menu / List	 Menu / Home
 Up	 Up
 Top Menu	 Shift + D.Menu / Top Menu
 Left	 Left
 Enter	 OK
 Right	 Right
 Display	 Display / Media
 Down	 Down
 Return	 Back / Return
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 Variable Replay	 Shift + Play /
 Variable Skip	 Shift + << /
 << REV	 << / Tune-





Original

Substituto

	Play		Play / Slow
	FWD >>		>> / Tune+
	Slow l>	+	Shift + >> /
	Stop		Stop / Hold
	Pause		Pause / Step / Freeze
	Rec Monitor	+	Shift + Rec / Rec Mode
	VCR	+	Shift + 4
	HDD	+	Shift + 7
	DVD	+	Shift + 2
	Rec Mode		Rec / Rec Mode
	VCR REC/OTR	+	Shift + 6
	HDD REC/OTR	+	Shift + 1
	DVD REC/OTR	+	Shift + 5
	Dubbing Menu		D.Menu / Top
	Search Mode		Red / Netflix / Search

Original

Substituto

