

























 



 















 






 




Original	Substituto	Original	Substituto
 Power	 Power	 Vol-	 Left
 Game	 Smart / List	 CH+	 CH+ / Page+
 Sleep	 Sleep / Timer	 CH+	 Up
 1	 1	 Vol+	 Vol+
 2	 2	 Vol+	 Right
 3	 3	 CH-	 CH- / Page-
 Display	 Display / Media	 CH-	 Down
 4	 4	 Mute	 Mute / Dimmer
 5	 5	 Menu	 Menu / Home
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Channel Return	 Back / Return		
 0	 0		
 +100	 Guide / EPG / -/--		
 Vol-	 Vol-		

Original	Substituto	Original	Substituto
 Vol-	 Left	 Vol-	 Left
 CH+	 CH+ / Page+	 Vol+	 Right
 CH+	 Up	 Vol+	 Right
 Vol+	 Vol+	 Vol+	 Right
 Vol+	 Right	 Vol+	 Right
 CH-	 CH- / Page-	 Vol+	 Right
 CH-	 Down	 Vol+	 Right
 Mute	 Mute / Dimmer	 Vol+	 Right
 Menu	 Menu / Home	 Vol+	 Right
		 Vol+	 Right
		 Vol+	 Right
		 Vol+	 Right
		 Vol+	 Right
		 Vol+	 Right
		 Vol+	 Right
		 Vol+	 Right
		 Vol+	 Right

