








 



 



 



 
















 
 


 
 


 


 
 
 

 
 
 


 



 
 








Original	Substituto	Original	Substituto
 STB Power	 Power	 Right / Vol +	 Right
 Mute	 Mute	 Left / Vol -	 Left
 Audio	 Dual	 OK	 Ok
 1	 1	 Up / CH +	 Ch +
 2	 2	 Down / CH -	 Ch -
 3	 3	 Right / Vol +	 Vol +
 4	 4	 Left / Vol -	 Vol -
 5	 5	 Menu	 Menu
 6	 6	 EPG	 Guide
 7	 7	 FAV	 Pre Ch
 8	 8	 Exit	 Exit
 9	 9	 Subt	 Subt
 0	 0	 Info	 Info
 List	 List	 TTX	 Text
 Recall	 Back	 TV / Radio	 TV/R
 Up / CH +	 Up	 Page -	 Shift + Down
 Down / CH -	 Down	 Page +	 Shift + Up





Original	Substituto
V-Format	Format
PVR	Media
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue
Play	Play
Pause	Pause
Stop	Stop
Rec	Rec
<<	<<
>>	>>
I<<	I<<
>>I	>>I
TV Power	Shift + Power
TV Vol -	Shift + Vol -
TV Vol +	Shift + Vol +

Original	Substituto
TV CH -	Shift + Ch -
TV CH +	Shift + Ch +
TV OK	Shift + Ok
TV Source	AV

