




Original	Substituto	Original	Substituto
 DVD / TV / AV	 Power	 Down / CH-	 Down
 1	 1	 Down / CH-	 Ch -
 2	 2	 Right / Vol+	 Right
 3	 3	 Right / Vol+	 Vol +
 4	 4	 Left / Vol-	 Left
 5	 5	 Left / Vol-	 Vol -
 6	 6	 OK	 Ok
 7	 7	 Pg Up	 Shift + Ch +
 8	 8	 Pg Dn	 Shift + Ch -
 9	 9	 Title	 Smart
 0	 0	 Info	 Info
 Mute	 Mute	 Goto / FAV	 Pre Ch
 Repeat / TV/Radio	 TV/R	 Audio	 Dual
 Repeat / TV/Radio	 Shift + Text	 Sub-T	 Subt
 Exit	 Exit	 Zoom / TTX	 Text
 Up / CH+	 Up	 Zoom / TTX	 Eject
 Up / CH+	 Ch +	 Setup	 Options





Original		Substituto		Original	Substituto
	Menu / EPG		Menu		
	Menu / EPG		Guide		
	USB		Media		
	Play / Pause		Play		
	Play / Pause		Pause		
	Stop		Stop		
	Copy/Delete / Rec		Rec		
	Red / <<		Red		
	Red / <<		<<		
	Green / >>		Green		
	Green / >>		>>		
	Yellow / I<<		Yellow		
	Yellow / I<<		I<<		
	Blue / >>I		>>I		
	Blue / >>I		Blue		

