



Original	Substituto	Original	Substituto
 Power	 Power	 Yellow/Zoom	 Yellow
 Mute	 Mute	 Blue/Option	 Blue
 Rec	 Rec	 Info	 Info
 Goto	 Smart	 FAV	 Pre Ch
 Aspect	 3D	 Menu	 Menu
 V.Format	 Format	 Exit	 Exit
 <<	 <<	 Up/CH+	 Up
 >>	 >>	 Down/CH-	 Down
 Play	 Play	 Right/Vol+	 Right
 Pause	 Pause	 Left/Vol-	 Left
 Stop	 Stop	 OK	 Ok
 Tv/Radio	 TV/R	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Dev	 Options	 SAT	 Media
 Recall	 Back	 EPG	 Guide
 Red/TTX	 Red	 Page+	 Ch +
 Green/SUB.T	 Green	 Page-	 Ch -

Original	Substituto	Original	Substituto
 TV	 MUTE	 Yellow/Zoom	 Yellow
 DVD	 SHIFT	 Blue/Option	 Blue
 SAT	 AUX	 Info	 Info
 AUX	 PLAY MODE	 FAV	 Pre Ch
 TV	 REC MODE	 Menu	 Menu
 DVD	 PLAY	 Exit	 Exit
 SAT	 PAUSE	 Up/CH+	 Up
 AUX	 RIGHT	 Down/CH-	 Down
 TV	 LEFT	 Right/Vol+	 Right
 DVD	 SOUND	 Left/Vol-	 Left
 SAT	 AD	 OK	 Ok
 AUX	 SETTINGS	 Vol+	 Vol +
 TV	 OPT	 Vol-	 Vol -
 DVD	 ECO	 SAT	 Media
 SAT	 3D	 EPG	 Guide
 AUX	 FORMAT	 Page+	 Ch +
 TV	 3D	 Page-	 Ch -
 DVD	 TIMER		
 SAT	 AV		
 AUX	 MENU		
 TV	 INFO		
 DVD	 OK		
 SAT	 LEFT		
 AUX	 RIGHT		
 TV	 RETURN		
 DVD	 BACK		
 SAT	 HOME		
 AUX	 SMART		
 TV	 APP		
 DVD	 MEDIA		
 SAT	 CH +		
 AUX	 CH -		
 TV	 VOL +		
 DVD	 VOL -		
 SAT	 1		
 AUX	 2		
 TV	 3		
 DVD	 4		
 SAT	 5		
 AUX	 6		
 TV	 7		
 DVD	 8		
 SAT	 9		
 AUX	 0		
 TV	 FAV		
 DVD	 PRE-CH		
 SAT	 A		
 AUX	 B		
 TV	 C		
 DVD	 D		
 SAT	 Mandis SHOP		
 AUX	 www.mandis.tv		





Original	Substituto	Original	Substituto
1	1	1	1
2	2	2	2
3	3	3	3
4	4	4	4
5	5	5	5
6	6	6	6
7	7	7	7
8	8	8	8
9	9	9	9
0	0	0	0
FIND	Find	TIMER AV	AV
MP	MP	DISC NAV LIST	List

Original	Substituto

