
 


 
 

 

 
 

 

 


 

 





Original	Substituto	Original	Substituto
 Standby	 Power	 TXT	 Text
 FAV	 Pre Ch	 Exit	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol+	 Vol +
 6	 6	 Vol-	 Vol -
 7	 7	 CH+	 Ch +
 8	 8	 CH-	 Ch -
 9	 9	 Red	 Red
 0	 0	 Info	 Info
 TV/Radio	 TV/R	 Green	 Green
 Back	 Back	 Yellow	 Yellow
 Menu	 Menu	 Audio	 Dual
 EPG	 Guide	 Blue	 Blue





Original	Substituto	Original	Substituto
	Subt.		Subt

