



Original	Substituto	Original	Substituto
	POWER		Power
	MUTE		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV / RADIO		TV/Radio /
	0		0
	<- PR		Back / Return
	V-MODE		Picture / Format
	PAUSE		Pause / Step / Freeze
	FAV		Fav / Marker / PC

Original	Substituto	Original	Substituto
	PAGE+		Shift + CH+ /
	MENU		Menu / Home
	PAGE-		Shift + CH- /
	PR+ / UP		Up
	PR+ / UP		CH+ / Page+
	VOL- / LEFT		Left
	VOL- / LEFT		Vol-
	OK / LIST		OK
	OK / LIST		Smart / List
	VOL+ / RIGHT		Right
	VOL+ / RIGHT		Vol+
	PR- / DOWN		Down
	PR- / DOWN		CH- / Page-
	SAT		Display / Media
	EXIT		Exit / Cancel / Clear
	EPG		Guide / EPG / -/-
	RED / FIND		Red / Netflix / Search





Original	Substituto	Original	Substituto
	GREEN /		Green / APP / Repeat
	YELLOW / TXT		Text / Goto
	YELLOW / TXT		Yellow / YouTube / Repeat
	BLUE / AUDIO L/R		Blue / Prime Video / Random
	INFO		Info / Angle
	TV/AV		AV / Input / RDS
	SLEEP		Sleep / Timer
	ZOOM		Zoom / Size
	RECORD		Rec / Rec Mode
	PLAY		Play / Slow
	STOP		Stop / Hold
	SHIFT		Setup / OPT /
	<< FAST		<< / Tune-
	FAST >>		>> / Tune+
	< SLOW		I<< / Preset-
	SLOW >		>>I / Preset+

