





 












Original	Substituto
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 HDD	 Shift + 7
 AV/INPUT	 AV / Input / RDS
 AV/INPUT Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 CH- / Page-
 7	 7
 8	 8

Original	Substituto
 9	 9
 Vol+ Tv	 Vol+
 Dubbing	 Blue / Prime Video / Random
 0	 0
 Mute Tv	 Mute / Dimmer
 Vol- Tv	 Vol-
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Clear	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Timer Rec	 Sleep / Timer
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze





Original	Substituto
	 Play / Slow
	 Stop / Hold
	 D.Menu / Top
	 Up
	 Menu / Home
	 Left
	 OK
	 Right
	 Display / Media
	 Down
	 Back / Return
	 Text / Goto
	 Fav / Marker / PC
	 Red / Netflix / Search
	 Setup / OPT /
	 Smart / List
	 Zoom / Size

Original	Substituto
	 Sound / Title
	 Guide / EPG / -/-
	 Info / Angle
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Picture / Format
	 TV/Radio /

