



Original	Substituto	Original	Substituto
 TV/PC	 Eject / Surround	 0	 0
 Power	 Power	 Q.View	 Display / Media
 Input	 AV / Input / RDS	 Menu	 Menu / Home
 TV/Radio	 TV/Radio /	 Up	 Up
 Text	 Text / Goto	 Exit	 Exit / Cancel / Clear
 I-II	 Audio / Lang I/II	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 1	 1	 Right	 Right
 2	 2	 Info	 Info / Angle
 3	 3	 Down	 Down
 4	 4	 Guide	 Guide / EPG / -/-
 5	 5	 Vol+	 Vol+
 6	 6	 Return	 Back / Return
 7	 7	 PR+	 CH+ / Page+
 8	 8	 Vol-	 Vol-
 9	 9	 PR-	 CH- / Page-
 List	 Smart / List	 FAV	 Fav / Marker / PC





Original	Substituto	Original	Substituto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Stop		Stop / Hold
	Yellow		Yellow / YouTube / Repeat
	Play		Play / Slow
	Blue		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Q.Menu		D.Menu / Top
	<<		<< / Tune-
	T.OPT		Setup / OPT /
	>>		>> / Tune+
	Subtitle		Subtitle / EQ
	Mark		Picture / Format

