



Original	Substituto
Power	Power
Open/Close	Eject / Surround
Sound	Sound / Title
Display	Display / Media
PR/CH+	CH+ / Page+
PR/CH-	CH- / Page-
Up	Up
Return	Back / Return
Vol-	Vol-
Left	Left
Enter/Select	OK
Vol+	Vol+
Right	Right
Menu	Menu / Home
PR/CH-	CH- / Page-
Down	Down
Title	Shift + Sound / Title
Pause/Step	Pause / Step / Freeze

Original	Substituto
<I Slow	<< / Tune-
Slow I>	>> / Tune+
Stop	Stop / Hold
I<< Skip/Scan	I<< / Preset-
Play	Play / Slow
Scan/Skip >>I	>>I / Preset+
1	1
2	2
3	3
Program	TV/Radio /
4	4
5	5
6	6
Clear	Exit / Cancel / Clear
7	7
8	8
9	9



