



Original	Substituto	Original	Substituto
	TV		TV/Radio /
	Power		Power
	Input		AV / Input / RDS
	PIP		D.Menu / Top
	Zoom -		I<< / Preset-
	Zoom +		>>I / Preset+
	Sleep		Sleep / Timer
	Text		Text / Goto
	SSM		Sound / Title
	PSM		Picture / Format
	I/II		Audio / Lang I/II
	Menu		Menu / Home
	ARC		Info / Angle
	Exit		Exit / Cancel / Clear
	Left		Left
	Up		Up
	Right		Right

Original	Substituto	Original	Substituto
	OK		OK
	Down		Down
	Red / PIP PR -		Red / Netflix / Search
	Red / PIP PR -		Shift + CH- /
	Green / PIP PR +		Green / APP / Repeat
	Green / PIP PR +		Shift + CH+ /
	Yellow / Swap		Yellow / YouTube / Repeat
	Yellow / Swap		Back / Return
	Blue / PIP Input		Shift + AV / Input / RDS
	Blue / PIP Input		Blue / Prime Video / Random
	Vol +		Vol+
	PR +		CH+ / Page+
	Vol -		Vol-
	Mute		Mute / Dimmer
	List		Smart / List
	PR -		CH- / Page-
	1		1





Original		Substituto	
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Favourite		Fav / Marker / PC
	0		0
	Q.View		Display / Media
	Size		Zoom / Size
	Position		Play / Slow
	Index		Pause / Step / Freeze
	Hold		Stop / Hold
	Time		Shift + Sleep / Timer
	Reveal		Rec / Rec Mode

Original		Substituto	
	Mix		Shift + Text /
	Mode		Setup / OPT /















 

 

 

 





 

















Original	Substituto
Power DVD	Power
Menu	Menu / Home
Up	Up
Down	Down
Right	Right
Left	Left
OK	OK
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Substituto
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
<<	<< / Tune-
>>	>> / Tune+
>>	>> / Preset+
<<	<< / Preset-
Power Audio	Shift + Power
Vol+ Audio	Vol+
Vol- Audio	Vol-
Mute Audio	Mute / Dimmer













 







 







 
 





 





 



 
 


 


 
Original	Substituto
 Power	 Power
 Input	 AV / Input / RDS
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold

Original	Substituto
 Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+





Original	Substituto	Original	Substituto
 Power STB	 Power	 5 STB	 5
 Input STB	 AV / Input / RDS	 6 STB	 6
 Menu STB	 Menu / Home	 7 STB	 7
 Up STB	 Up	 8 STB	 8
 OK STB	 OK	 9 STB	 9
 Down STB	 Down	 0 STB	 0
 Right STB	 Right	 Power Cable	 Shift + Power
 Left STB	 Left	 Menu Cable	 Shift + Menu /
 Vol+ STB	 Vol+	 Up Cable	 Shift + Up
 Vol- STB	 Vol-	 OK Cable	 Shift + OK
 Mute STB	 Mute / Dimmer	 Down Cable	 Shift + Down
 PR+ STB	 CH+ / Page+	 PR+ Cable	 Shift + CH+ /
 PR- STB	 CH- / Page-	 PR- Cable	 Shift + CH- /
 1 STB	 1	 Vol+ Cable	 Shift + Vol+
 2 STB	 2	 Vol- Cable	 Shift + Vol-
 3 STB	 3	 Mute Cable	 Shift + Mute / Dimmer
 4 STB	 4	 1 Cable	 Shift + 1

Original	Substituto	Original	Substituto
 5 STB	 5	 Power Cable	 Shift + Power
 6 STB	 6	 Menu Cable	 Shift + Menu /
 7 STB	 7	 Up Cable	 Shift + Up
 8 STB	 8	 OK Cable	 Shift + OK
 9 STB	 9	 Down Cable	 Shift + Down
 0 STB	 0	 PR+ Cable	 Shift + CH+ /
 Power Cable	 Shift + Power	 PR- Cable	 Shift + CH- /
 Menu Cable	 Shift + Menu /	 Vol+ Cable	 Shift + Vol+
 Up Cable	 Shift + Up	 Vol- Cable	 Shift + Vol-
 OK Cable	 Shift + OK	 Mute Cable	 Shift + Mute / Dimmer
 Down Cable	 Shift + Down	 1 Cable	 Shift + 1
 PR+ Cable	 Shift + CH+ /		
 PR- Cable	 Shift + CH- /		
 Vol+ Cable	 Shift + Vol+		
 Vol- Cable	 Shift + Vol-		
 Mute Cable	 Shift + Mute / Dimmer		
 1 Cable	 Shift + 1		





Original	Substituto
[2]	2 Cable SHIFT + DVD 2 Shift + 2
[3]	3 Cable SHIFT + CD - STB 3 Shift + 3
[4]	4 Cable SHIFT + VIDEO 4 Shift + 4
[5]	5 Cable SHIFT + TAPE 5 Shift + 5
[6]	6 Cable SHIFT + TUNER 6 Shift + 6
[7]	7 Cable SHIFT + AUX - HDD 7 Shift + 7
[8]	8 Cable SHIFT + USB 8 Shift + 8
[9]	9 Cable SHIFT + BLUETOOTH 9 Shift + 9
[0]	0 Cable SHIFT + HDMI - SAT 0 Shift + 0

Original	Substituto

